RANGEMASTER
BY BROAN-NUTONE

RM60000 SERIES
RANGE HOOD
INSTALLATION INSTRUCTIONS AND USER MANUAL

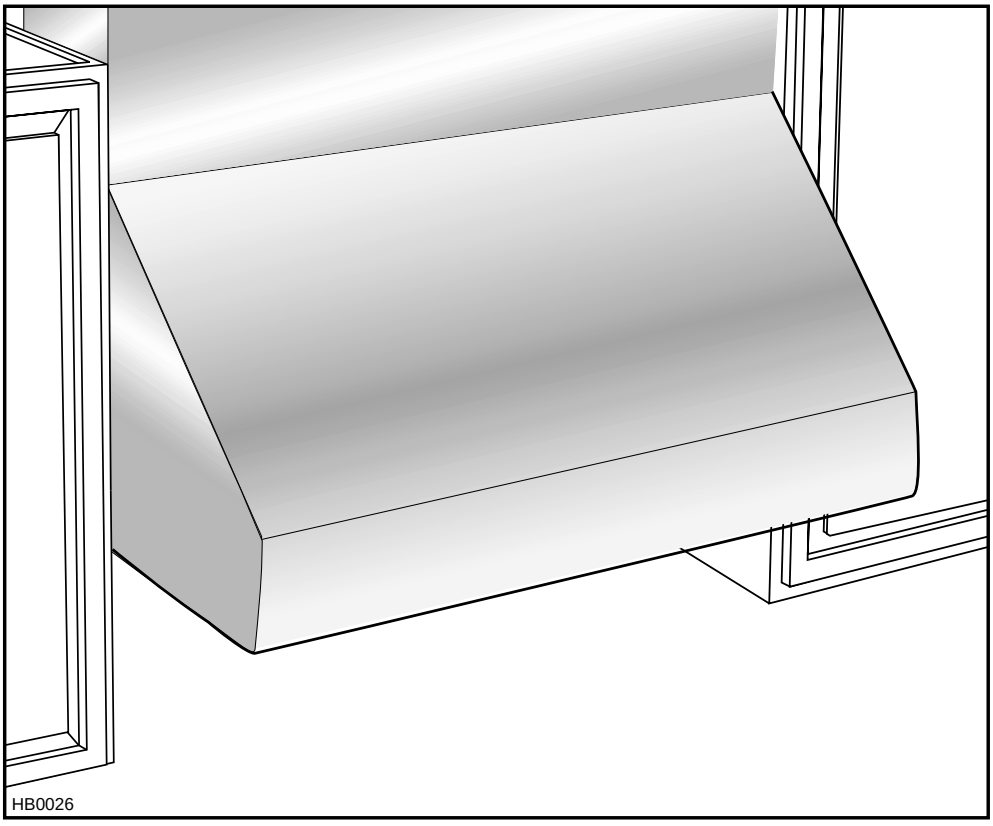

RESIDENTIAL USE ONLY

READ AND SAVE THESE INSTRUCTIONS

INSTALLER: LEAVE THIS MANUAL WITH HOMEOWNER.
HOMEOWNER: USE AND CARE INFORMATION ON PAGE 11.

V05527 rev B

⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSON(S) OBSERVE THE FOLLOWING:

1. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer at the address or telephone number listed in the warranty.
2. Before servicing or cleaning unit, switch power off at service panel and lock service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
3. Installation work and electrical wiring must be done by qualified personnel in accordance with all applicable codes and standards, including fire-rated construction codes and standards.
4. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent backdrafting. Follow the heating equipment manufacturer's guidelines and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
5. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
6. Ducted fans must always be vented to the outdoors.
7. Do not use this range hood with any additional solid-state speed control device.
8. To reduce the risk of fire, use only steel ductwork.
9. This unit must be grounded.

TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE:

a) Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.

b) Always turn hood ON when cooking at high heat or when cooking flaming foods.

c) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.

d) Use proper pan size. Always use cookware appropriate for the size of the surface element.

⚠ WARNING

TO REDUCE THE RISK OF INJURY TO PERSON(S) IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING*:

1. SMOTHER FLAMES with a close-fitting lid, cookie sheet, or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. IF THE FLAMES DO NOT GO OUT IMMEDIATELY, EVACUATE AND CALL THE FIRE DEPARTMENT.
2. NEVER PICK UP A FLAMING PAN – You may be burned.
3. DO NOT USE WATER, including wet dishcloths or towels – This could cause a violent steam explosion.
4. Use an extinguisher ONLY if:
   - **A.** You know you have a Class ABC extinguisher and you know how to operate it.
   - **B.** The fire is small and contained in the area where it started.
   - **C.** The fire department has been called.
   - **D.** You can fight the fire with your back to an exit.

   * Based on "Kitchen Fire Safety Tips" published by NFPA.

CAUTION

1. For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
2. To avoid motor bearing damage and noisy and/or unbalanced impellers, keep drywall spray, construction dust, etc. off power unit.
3. Your hood motor has a thermal overload which will automatically shut off the motor if it becomes overheated. The motor will restart when it cools down. If the motor continues to shut off and restart, have the hood serviced.
4. For best capture of cooking impurities, the bottom of the hood should be a minimum of 24" and a maximum of 30" above the cooking surface.
5. Please read specification label on product for further information and requirements.
6. To reduce the risk of fire and to properly exhaust air on a ducted installation, be sure to duct air outside – Do not exhaust air into spaces within walls or ceiling or into attics, crawl spaces, or garage.
7. This product is equipped with a thermostat which may start blower automatically. To reduce the risk of injury and to prevent power from being switched on accidentally, switch power off at service panel and lock or tag service panel.
8. The RM60000 Series hood must be installed with blower models RM325H, RM326H, 331H, 332H, 335 or 336 only. Other blowers cannot be substituted. (Blowers sold separately.)

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

TABLE OF CONTENTS

1.0 SELECT BLOWER OPTION AND INSTALL DUCTWORK . .5
2.0 MEASURE INSTALLATION 6
3.0 PREPARE THE INSTALLATION 6
4.0 INSTALL BACKSPLASH 7
5.0 INSTALL WOOD MOUNTING STRIP 7
6.0 INSTALL THE HOOD 7
7.0 INSTALL TRANSITION TO ROUGH-IN PLATE 8
8.0 INSTALL THE ROUGH-IN PLATE TO THE HOOD 8-9
9.0 INSTALL THE OPTIONAL SOFFIT CHIMNEY 9
10.0 INSTALL BLOWER 9
11.0 INSTALL LIGHT BULBS AND WARMING LAMPS 9
12.0 INSTALL FILTERS 10
13.0 USE AND CARE 11
14.0 OPERATION 12
15.0 WIRING DIAGRAM 13
16.0 SERVICE PARTS 14-15
17.0 WARRANTY 16

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

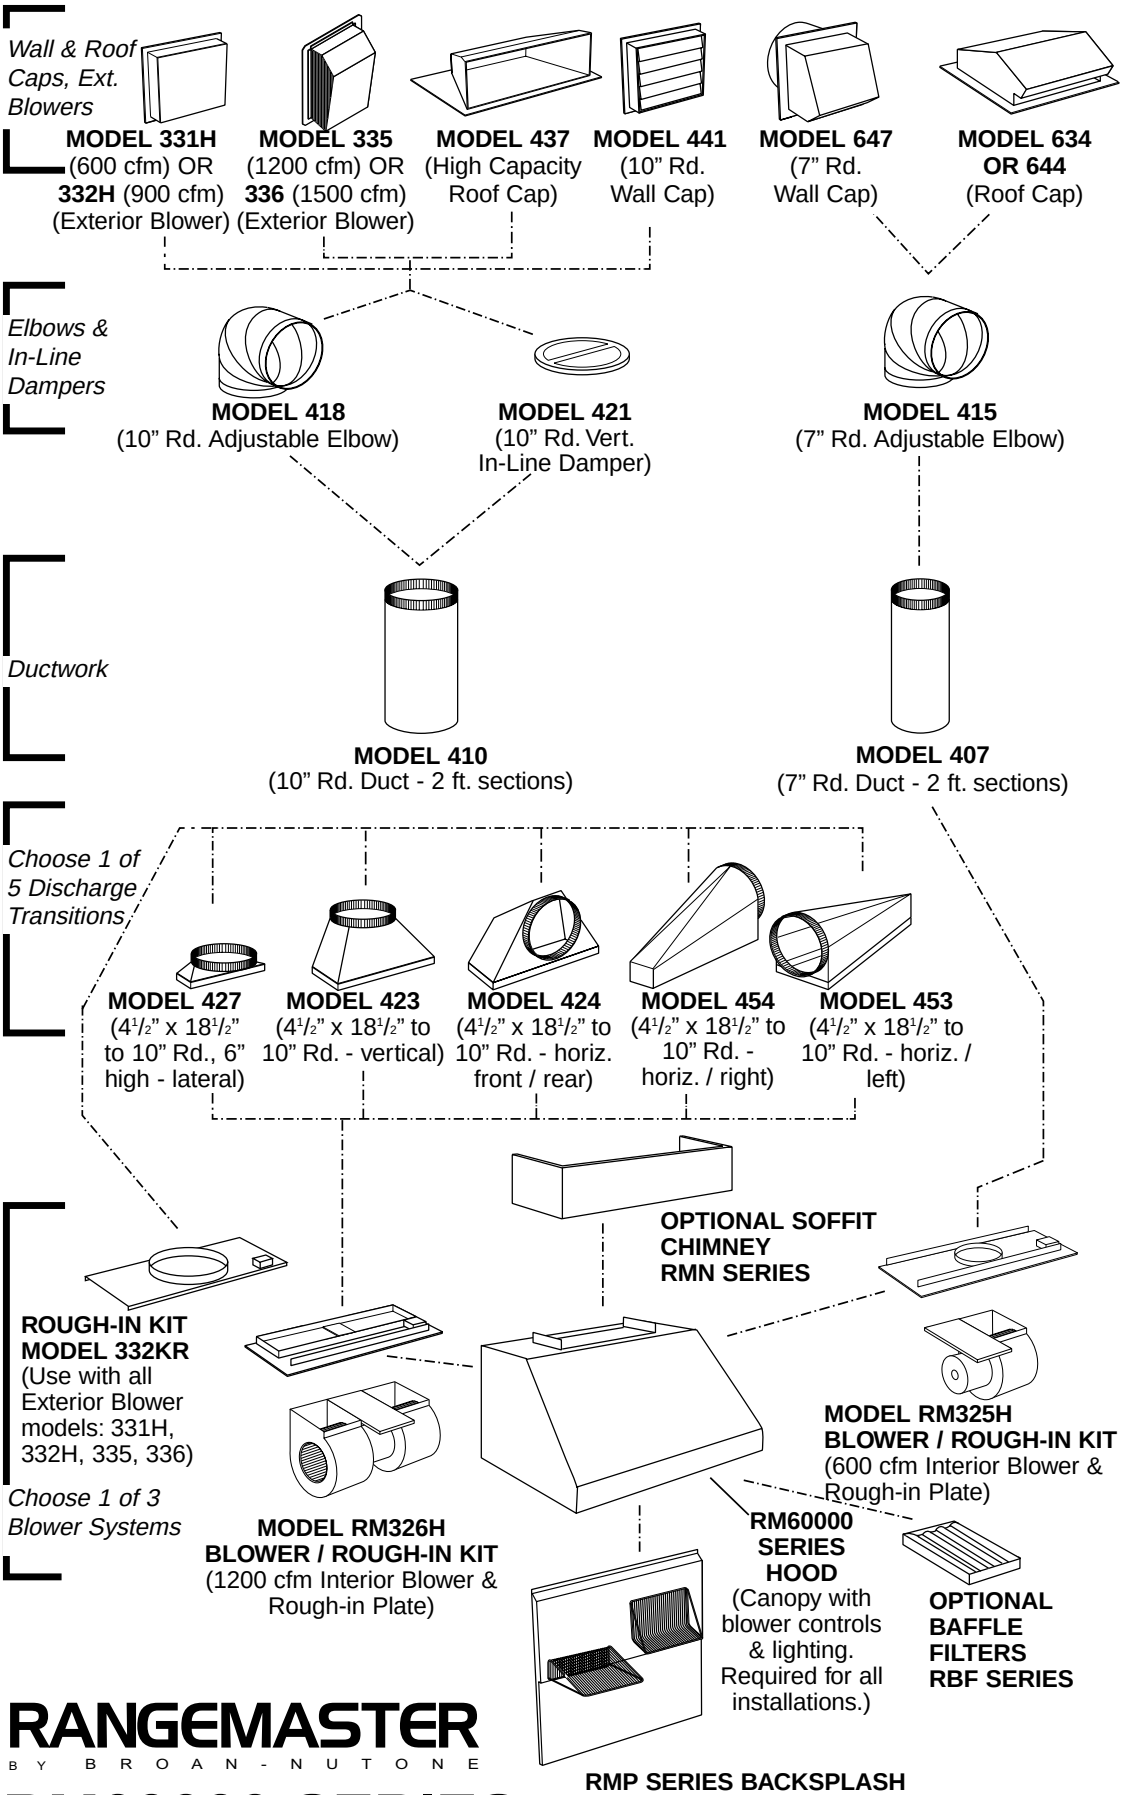
Wall & Roof Caps, Ext. Blowers
MODEL 331H (600 cfm) OR 332H (900 cfm) (Exterior Blower)
MODEL 335 (1200 cfm) OR 336 (1500 cfm) (Exterior Blower)
MODEL 437 (High Capacity Roof Cap)
MODEL 441 (10" Rd. Wall Cap)
MODEL 647 (7" Rd. Wall Cap)
MODEL 634 OR 644 (Roof Cap)
Elbows & In-Line Dampers
MODEL 418 (10" Rd. Adjustable Elbow)
MODEL 421 (10" Rd. Vert. In-Line Damper)
MODEL 415 (7" Rd. Adjustable Elbow)
Ductwork
MODEL 410 (10" Rd. Duct - 2 ft. sections)
MODEL 407 (7" Rd. Duct - 2 ft. sections)
Choose 1 of 5 Discharge Transitions
MODEL 427 (4½" x 18½" to 10" Rd., 6" high - lateral)
MODEL 423 (4½" x 18½" to 10" Rd. - vertical)
MODEL 424 (4½" x 18½" to 10" Rd. - horiz. front / rear)
MODEL 454 (4½" x 18½" to 10" Rd. - horiz. / right)
MODEL 453 (4½" x 18½" to 10" Rd. - horiz. / left)
OPTIONAL SOFFIT CHIMNEY RMN SERIES
ROUGH-IN KIT MODEL 332KR (Use with all Exterior Blower models: 331H, 332H, 335, 336)
Choose 1 of 3 Blower Systems
MODEL RM326H BLOWER / ROUGH-IN KIT (1200 cfm Interior Blower & Rough-in Plate)
MODEL RM325H BLOWER / ROUGH-IN KIT (600 cfm Interior Blower & Rough-in Plate)
RM60000 SERIES HOOD (Canopy with blower controls & lighting. Required for all installations.)
OPTIONAL BAFFLE FILTERS RBF SERIES
RMP SERIES BACKSPLASH (Stainless Steel wall covering with warming shelves. Optional)

RANGEMASTER
BY BROAN-NUTONE

RM60000 SERIES
RANGE HOOD SYSTEM

HL0030

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

1. SELECT BLOWER OPTION AND INSTALL DUCTWORK

Either an interior or exterior blower may be used with this hood. The RM60000 Series hood must be installed with blower models RM325H, RM326H, 331H, 332H, 335 or 336 only. Other blowers cannot be substituted. (Blowers sold separately).

NOTES:1. The 331H, 332H, 335 or 336 exterior blower MUST BE installed with the rough-in kit model 332KR (sold separately).

2. In addition to the blower models listed above, this hood is also compatible with older internal blower versions 325H ans 326H. However, discard the installation instructions included with those blowers and and contact our technical suppport to obtain replacement instruction.

Plan where and how the ductwork will be located.

Install proper-sized ductwork, transition(s), elbow(s), and roof or wall cap for the type of blower you are using.

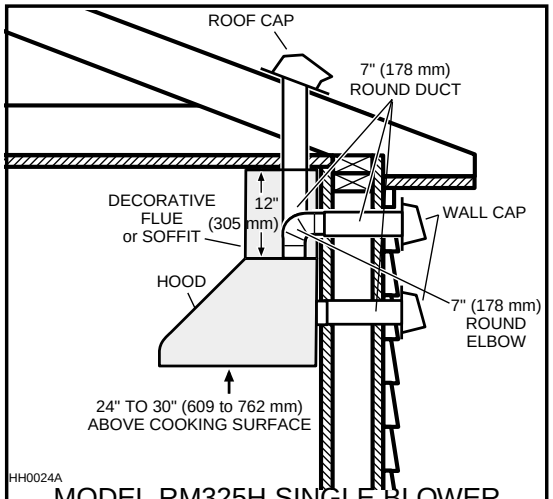

MODEL RM325H SINGLE BLOWER
TYPICAL DUCTWORK

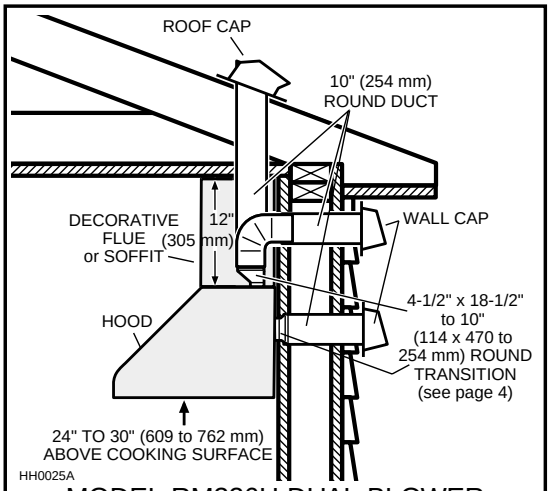

MODEL RM326H DUAL BLOWER
TYPICAL DUCTWORK

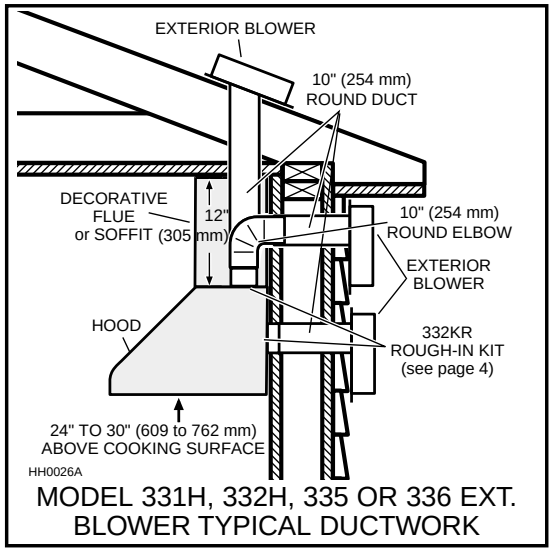

MODEL 331H, 332H, 335 OR 336 EXT.
BLOWER TYPICAL DUCTWORK

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

2. MEASURE INSTALLATION

Dimensions for the most common installations are shown below.

Adjust your measurements for various heights of ceilings, soffits, cabinets or cooktops. **For proper operation, the hood must be a minimum of 24" and a maximum of 30" above the cooktop.**

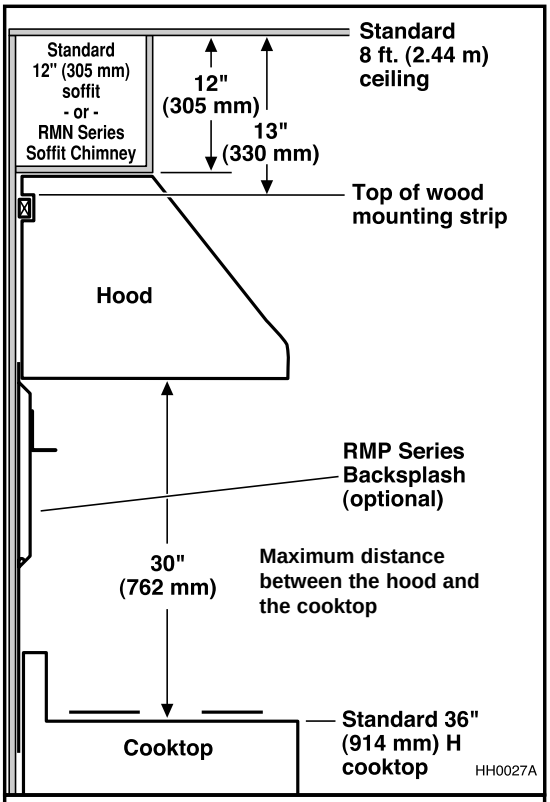
Standard 12" (305 mm) soffit - or - RMN Series Soffit Chimney
12" (305 mm)
13" (330 mm)
Standard 8 ft. (2.44 m) ceiling
Top of wood mounting strip
Hood
RMP Series Backsplash (optional)
30" (762 mm)
Maximum distance between the hood and the cooktop
Cooktop
Standard 36" (914 mm) H cooktop
HH0027A

INSTALLATION WITH 12” SOFFIT OR OPTIONAL SOFFIT CHIMNEY RMN SERIES

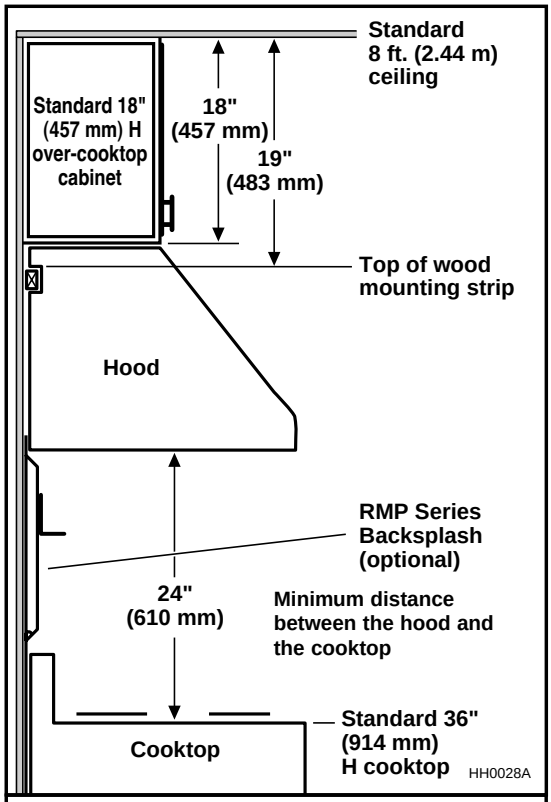
Standard 18" (457 mm) H over-cooktop cabinet
18" (457 mm)
19" (483 mm)
Standard 8 ft. (2.44 m) ceiling
Top of wood mounting strip
Hood
RMP Series Backsplash (optional)
24" (610 mm)
Minimum distance between the hood and the cooktop
Cooktop
Standard 36" (914 mm) H cooktop
HH0028A

INSTALLATION WITH STANDARD 18” HIGH OVER-COOKTOP CABINET

3. PREPARE THE INSTALLATION

Remove the installation kit from inside the hood.

Make sure that the following items are included:

-Wood strip

-Installation manual

-Accessories including:

.Filters (Quantity varies depending on range hood width)

.Bag of parts including:

Screws #10-2" flat head (4),Screws #8-3/4" (8), Nuts #10-32 (4)
Wall anchors (2), Washers 3/16" ID X 3/4" OD (2)

Using a Phillips #2 or a Robertson #2 screwdriver, unscrew the hood from the bottom of crate. Refer to figure beside to locate all 4 screws. Discard these screws and remove hood from wood pallet.

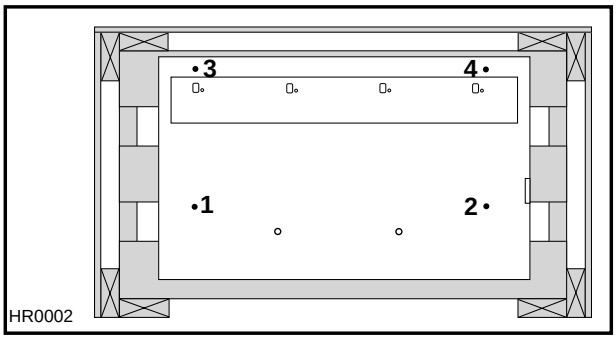

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

4. INSTALL BACKSPLASH

(OPTIONAL) *RMP Series*

Backsplash must be installed before the hood shell because the hood shell covers the backsplash top mounting screws. In order to be able to install the backsplash, make sure you have at least 18" (457 mm) clearance between bottom of hood and range control panel or cooktop. (Refer to instructions included with backsplash.)

5. INSTALL WOOD MOUNTING STRIP

Measure and mark a level line on wall above cooktop location for the wood mounting strip (see illustration below and under step 2). Use #10 - 2" flat head screws to secure the mounting strip to the drywall. Make sure to hit the wall studs. (See figure below.)

CAUTION

Due to the weight of this hood, ensure that the wood strip is attached to all of the available wall studs (2 studs minimum for the 30" hood, more as hood width increases); not into the drywall alone.

1. Drywall
2. Wood Mounting Strip
3. Flat Head Screw
4. Wall Anchor Location
5. Outline of the Back of the Hood
6. Wall Studs

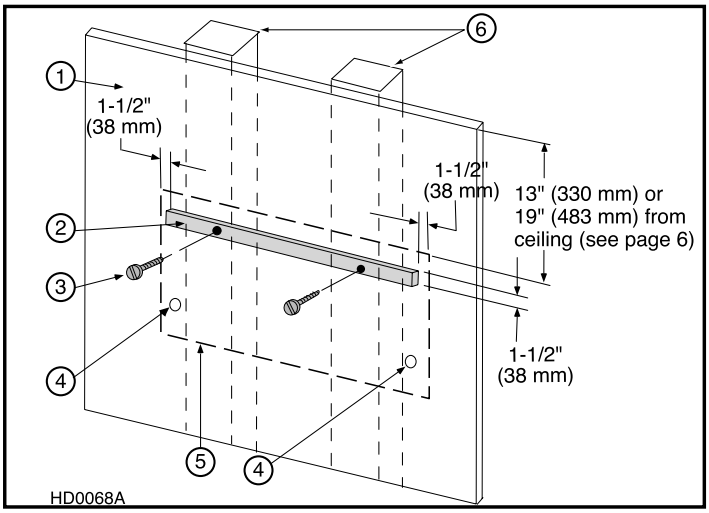

6. INSTALL THE HOOD

Rest the back cavity of the hood on the wood mounting strip.

CAUTION

Hold the hood until it is completely secured to the wood mounting strip.

Secure hood to wood strip with (4) screws #8 - 3/4" (for 30" and 36" width hoods) or (6) screws (for 42" width and wider hoods) provided at locations shown. Drill (2) 3/16" size holes into the drywall for wall anchors through the existing holes in the inside hood back in the locations shown. Then install the two wall anchors and attach the hood to these anchors with the remaining #8 - 3/4" screws and the (2) washers provided.

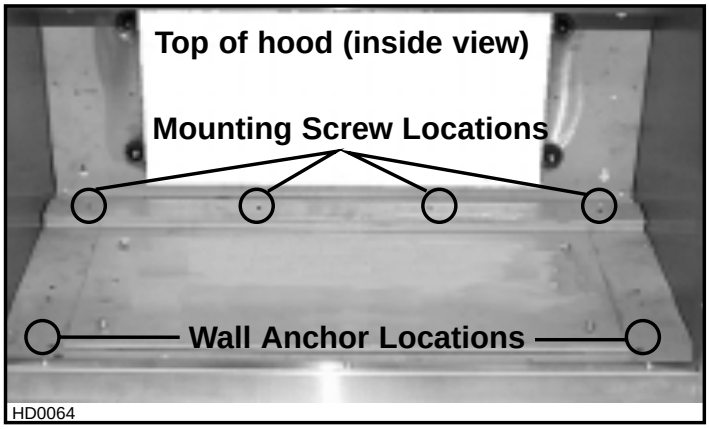

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

7. INSTALL TRANSITION TO ROUGH-IN PLATE

Model 423, 424, 427, 453, or 454

Attach transition (if required) to blower rough-in plate.

Use duct tape to make all joints secure and air-tight.

NOTE: Model RM325H blower plate connects directly to 7" round ductwork without a transition.
Exterior blower models utilize a model 332KR rough-in plate which connects directly to 10” round ductwork without a transition.

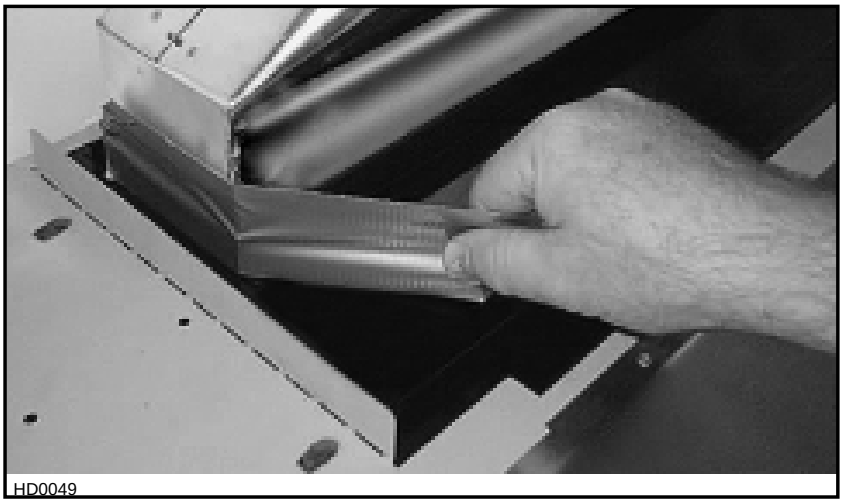
HD0049

8. INSTALL THE ROUGH-IN PLATE TO THE HOOD

Run power cable to installation location. Refer to the instructions included with the selected blower or rough-in kit (sold separately) for details on installing the rough-in plate. Install the rough-in plate so that the wiring box is located on the right side as you are facing the hood.

For ducting through back of hood, remove existing plate from inside back of hood and attach to inside top of hood to cover hole. Secure to threaded studs with same (4) nuts.

For ducting through top of hood, existing plate remains in place on inside back of hood.

1. Locknuts
2. Plate on top of hood
3. Rough-in plate on back of hood
4. Wiring Cover

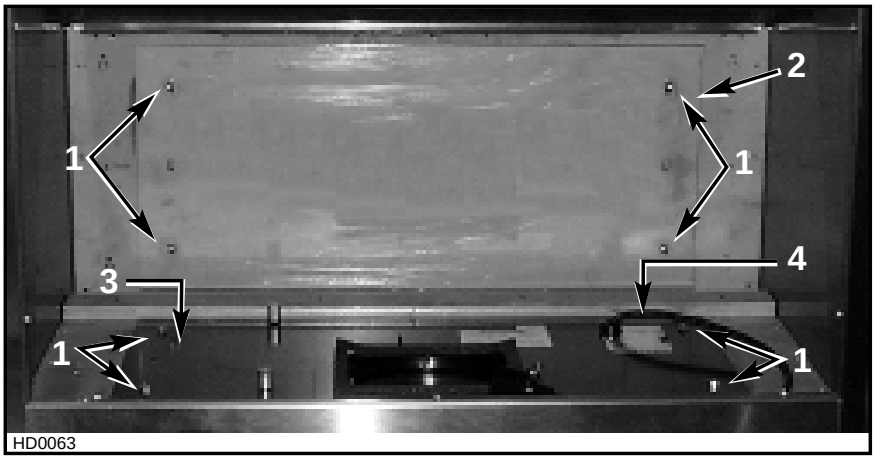

HD0063

Connect ducting to transition or rough-in plate as you are installing the rough-in plate. Use duct tape to make all joints secure and air-tight.

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

8. INSTALL THE ROUGH-IN PLATE TO THE HOOD (CONT'D)

Wiring

⚠ WARNING

Risk of electrical shock. Electrical wiring must be done by qualified personnel in accordance with all applicable codes and standards. Before connecting wires, switch power off at service panel and lock service disconnecting means to prevent power from being switched on accidentally.

Remove wiring cover from rough-in plate and set aside.

Remove appropriate knockout from rough-in plate. As you are installing the rough-in plate, feed 6" of power cable through knockout opening and attach cable to wiring box with appropriate connector.

Connect wires as shown in blower instructions.

Reinstall wiring cover.

9. INSTALL THE OPTIONAL SOFFIT CHIMNEY

(OPTIONAL) *RMN Series*

Refer to the instructions included with the soffit chimney.

10. INSTALL BLOWER

Refer to instructions included with blower.

Once the blower is installed, plug the blower unit into the female receptacle and the power supply onto the male connector inside the hood. DO NOT plug the two cords into each other.

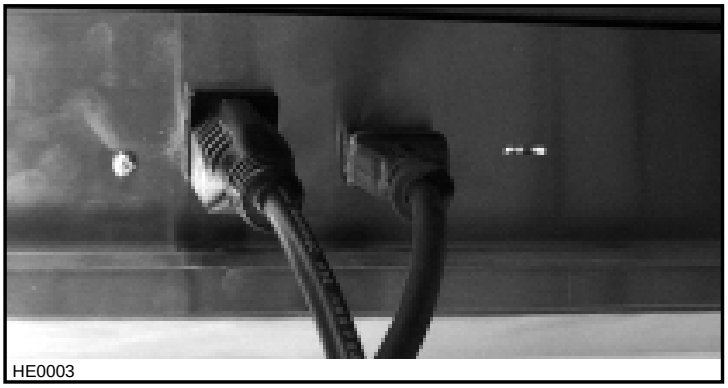

HE0003

11. INSTALL LIGHT BULBS AND WARMING LAMPS

Install (2) heat lamp bulbs. Use BR40 size, 250W Max., infrared bulbs only (purchase separately).

Install (3) halogen light bulbs. Use PAR20 50W Size (purchase separately).

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

12. INSTALL FILTERS

CAUTION

Remove protective plastic film covering filters before installing them.

It is recommended to install side filters first and finish with center one(s).

1. Insert upper end of filter into the hood (finger sized cup side).
2. Raise lower end toward the inside of hood.
3. Position rear part of filter into channel and pull.
4. Using finger sized cup, pull on the upper end of filter and slide it under the front inner retaining piece.

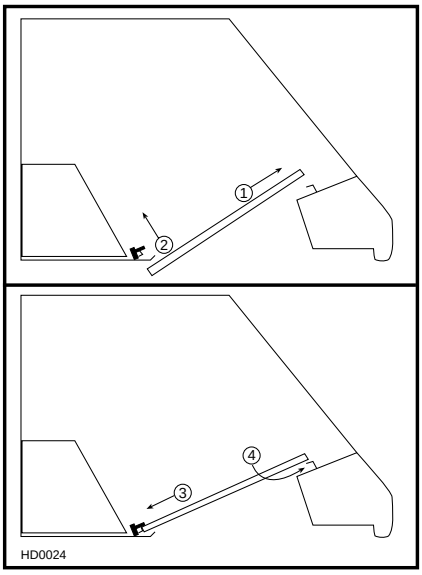

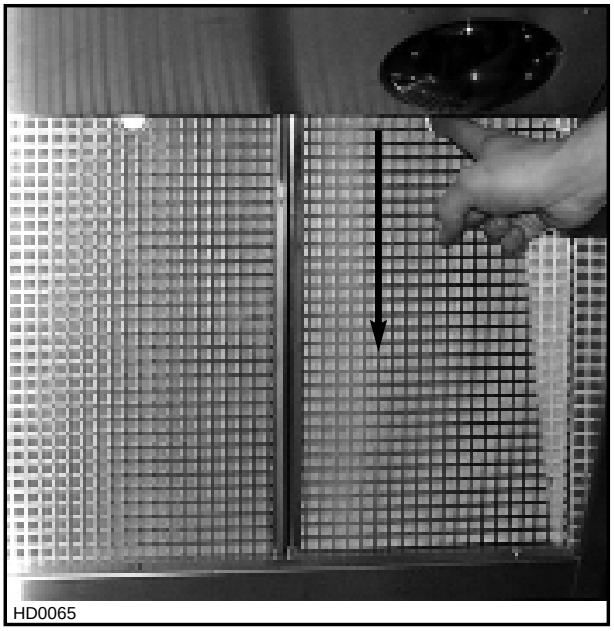
HD0065

Replacement filters are available from your dealer. See label inside hood for size and part number.

Baffle Filters

Baffle filters are available as an option. To order them, refer to the table below to find the right filter kit number for your hood. To install them, refer to instruction sheet included with baffle filter kit.

HD0011

BAFFLE FILTER (TYPICAL)

KIT #	HOOD WIDTH
RBF6030	30”
RBF6036	36”
RBF6042	42”
RBF6048	48”
RBF6054	54”
RBF6060	60”
RBF6066	66”
RBF6072	72”

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

13. USE AND CARE

Grease Filters

The grease filters should be cleaned frequently. Use a warm detergent solution. Grease filters are dishwasher safe. Wash more often if our cooking style generates greater grease - like frying foods or wok cooking.
Remove filters by pushing filters towards the back of hood and rotating filters downward.

Blower Cleaning

Remove the filters in order to access the blower. Vacuum blower to clean. Do not immerse in water. Refer to blower instruction manual for more details.

Grease Rail

The grease rail should be cleaned frequently, especially if baffle filters are used.
Remove filters, then, disassemble the grease rail from the hood by removing its 3 retaining screws. See illustration beside.

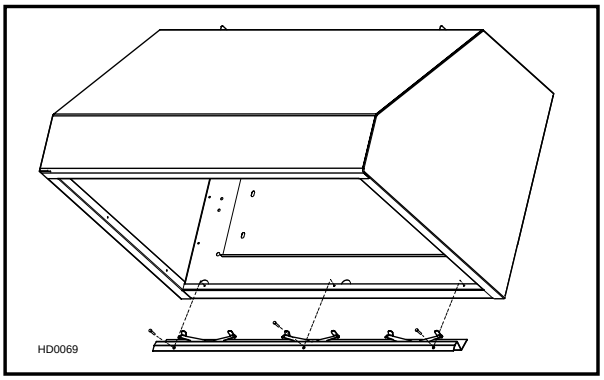

Refer to *stainless steel cleaning* in Hood Cleaning section below. Once the grease rail is clean and dry, reassemble it to the hood and reinstall filters.

Hood Cleaning

Stainless steel cleaning: How to maintain its « BRIGHT LOOK »

Do:

- Regularly wash surfaces with clean cloth or rag soaked with warm water and mild soap or liquid dish detergent.
- Always clean in the direction of original polish lines.
- Always rinse well with clear water (2 or 3 times) after cleaning. Wipe dry completely.
- You may also use a specialized household stainless steel cleaner.

Don't:

- Do not use any steel or stainless steel wool or any other scrapers to remove stubborn dirt.
- Do not use any harsh or abrasive cleansers.
- Do not allow dirt to accumulate.
- Do not let plaster dust or any other construction residues reach the hood. During construction/renovation, cover the hood to make sure no dust sticks to stainless steel surface.

Avoid: when choosing a detergent

- Any cleaners that contain **bleach** will attack stainless steel.
- Any products containing : **chloride**, **fluoride**, **iodide**, **bromide** will deteriorate surfaces rapidly.
- Any **combustible products** used for cleaning such as **acetone**, **alcohol**, **ether**, **benzol**, etc., are highly explosive and should not be used close to a range.

Enamel finish:

Clean with warm water and mild detergent only. When discoloration occurs, use a good enamel polish such as automotive polish. (**DO NOT** use rough abrasive cleaner or porcelain cleaner.)

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

14. OPERATION

Always turn ON your hood before you begin cooking in order to establish an air flow in the kitchen. Let the blower run for a few minutes to clear the air after you turn off the range. This will help keep the whole kitchen cleaner and brighter.

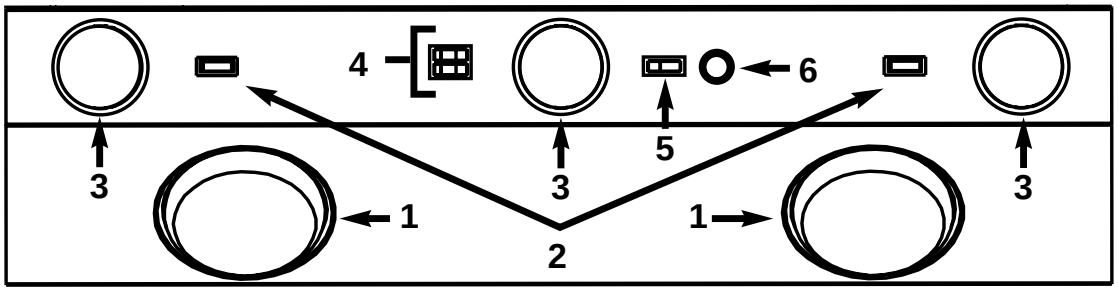

1. Warming lamps
2. Warming lamp switches
3. Halogen lights
4. Halogen light switches
5. ON/OFF Blower switch
6. Blower speed control

Warming lamps (Infrared)

Each warming lamp (item 1 in picture above) is controlled with is own ON/OFF switch (item 2 on picture above).

Use only BR40 Size, 250W Max., Infrared bulbs. (Purchase separately)

⚠ WARNING

Do not place highly flammable material on warming shelves.

Cooktop Lighting (Halogen)

A double set of ON/OFF switches (item 4 on picture above) control the halogen lights (item 3 on picture above).

The front rocker controls the center light. The rear rocker controls both side lights. Select one, two, or three lights for best cooktop lighting.

Use PAR 20, 50W halogen bulbs. (Purchase separately)

Blower

The blower is operated using two (2) controls.

Use the red, lighted ON/OFF switch (item 5 on picture above) to start and stop the blower. When turned on, the blower will operate at the previous setting of the speed control (item 6 on picture above).

Turn the speed control knob clockwise to decrease blower speed - counterclockwise to increase speed.

HEAT SENTRY™

Your hood is equipped with a HEAT SENTRY™ thermostat. This thermostat is a device that will turn on or speed up the blower if it senses excessive heat above the cooking surface.

1) If blower is OFF - it turns blower ON to HIGH speed.

2) If blower is ON at a lower speed setting - it turns blower up to HIGH speed.

When the temperature level drops to normal, the blower will return to its original setting.

⚠ WARNING

The HEAT SENTRY™ thermostat can start the blower even if the hood is turned OFF. When this occurs, it is impossible to turn the blower OFF with the switch. If you must stop the blower, do it from the main electrical panel.

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

15. WIRING DIAGRAM

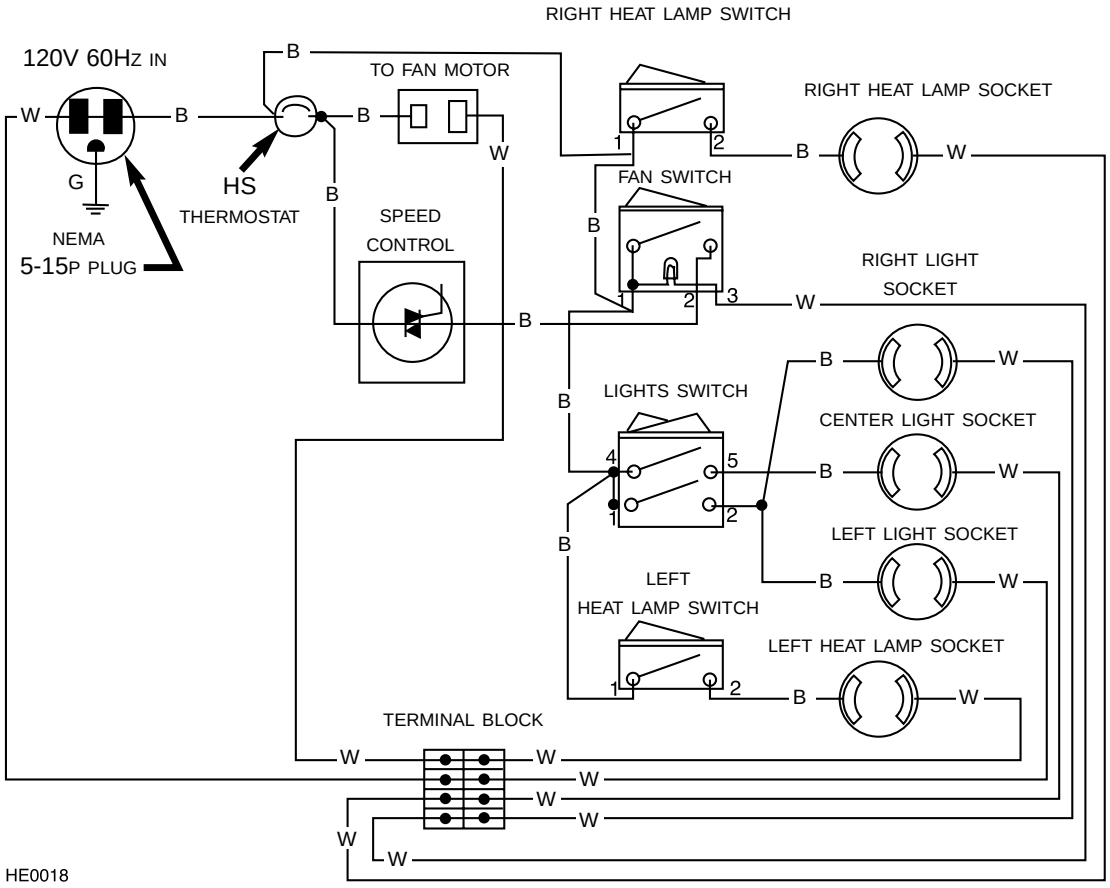

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

16. SERVICE PARTS

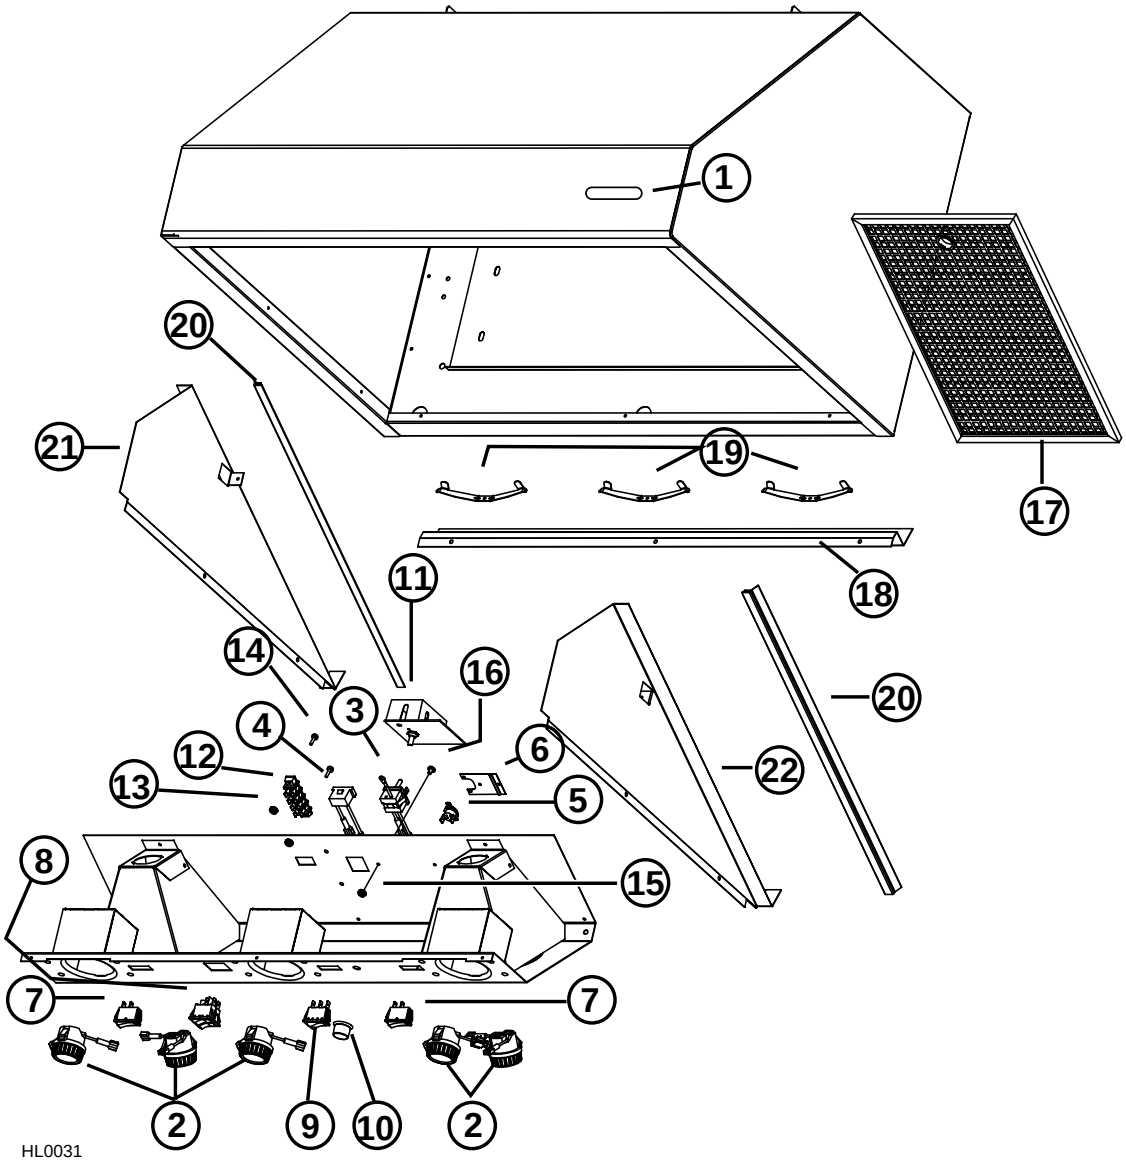

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

16. SERVICE PARTS (CONT'D)

KEY NO.	PART NUMBER	DESCRIPTION	QTY (HOOD WIDTH)							
			30"	36"	42"	48"	54"	60"	66"	72"
1	V03493	Rangemaster Logo	1	1	1	1	1	1	1	1
2	V02264	Socket Lamp	5	5	5	5	5	5	5	5
3	V02773	Male Connector	1	1	1	1	1	1	1	1
4	V02772	Female Connector	1	1	1	1	1	1	1	1
5	V03435	Thermostat	1	1	1	1	1	1	1	1
6	V03436	Thermostat Bracket	1	1	1	1	1	1	1	1
7	V02563	SPST Single Switch for Warming Lamps	2	2	2	2	2	2	2	2
8	V03502	SPST Double Switch for Halogen Lights	1	1	1	1	1	1	1	1
9	V03503	SPST Lighted Single Switch for Blower	1	1	1	1	1	1	1	1
10	V03504	Speed Control Button	1	1	1	1	1	1	1	1
11	V03501	Speed Controller	1	1	1	1	1	1	1	1
12	V03505	Terminal strip	1	1	1	1	1	1	1	1
‡	V03517	10" Power Cord	1	1	1	1	1	1	1	1
‡	V03519	10" Control Wire	1	1	1	1	1	1	1	1
‡	V03520	10" Lighted Switch Wire	1	1	1	1	1	1	1	1
13	V00673	Lock-Nut 8-32	2	2	2	2	2	2	2	2
14	V02512	Screw 8-32 x 1/2 Quadrex	2	2	2	2	2	2	2	2
15	V01869	Machine Screw 8-32 x 1/4	2	2	2	2	2	2	2	2
16	V01582	Lock nut 6-32	2	2	2	2	2	2	2	2
17	V05522	Sq. Perf. Grille Filter 9.5 x 15.25 x 0.355	3	-	-	-	-	-	-	-
17	V05523	Sq. Perf. Grille Filter 11.61 x 15.25 x 0.355	-	3	-	4	-	5	2	-
17	V05524	Sq. Perf. Grille Filter 13.61 x 15.25 x 0.355	-	-	3	-	-	-	3	-
17	V05525	Sq. Perf. Grille Filt. 17.525 x 15.25 x 0.355	-	-	-	-	3	-	-	4
18	V14763	Grease Rail 30"	1	-	-	-	-	-	-	-
18	V14764	Grease Rail 36"	-	1	-	-	-	-	-	-
18	V14765	Grease Rail 42"	-	-	1	-	-	-	-	-
18	V14766	Grease Rail 48"	-	-	-	1	-	-	-	-
18	V14767	Grease Rail 54"	-	-	-	-	1	-	-	-
18	V14768	Grease Rail 60"	-	-	-	-	-	1	-	-
18	V14769	Grease Rail 66"	-	-	-	-	-	-	1	-
18	V14770	Grease Rail 72"	-	-	-	-	-	-	-	1
19	V05528	Filter Spring 5.265" x 0.350"	3	3	3	4	3	5	5	4
20	V05521	Sealing Extrusion 20.625"	2	2	2	2	2	2	2	2
21	V14744	Left Side Liner	1	1	1	1	1	1	1	1
22	V14745	Right Side Liner	1	1	1	1	1	1	1	1
‡	V05527	Installation Guide	1	1	1	1	1	1	1	1
‡	V12971	Parts Bag (Flat head screws #10 x 2" (4), Screws #8 x 3/4" (8), Nuts #10-32 (4). Wall anchors (2), Washers 3/16" ID x 3/4" OD (2))	1	1	1	1	1	1	1	1
‡	V02544	Halogen Lamp PAR20 50W	3	3	3	3	3	3	3	3
‡*		Warming Lamp BR40, 250W max.	2	2	2	2	2	2	2	2

‡ Not shown.
* Purchase locally.

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED

17. WARRANTY

BROAN-NUTONE ONE YEAR LIMITED WARRANTY

Broan-NuTone warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workmanship for a period of one year from the date of original purchase. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

During this one-year period, Broan-NuTone will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service.

This warranty does not cover (**a**) normal maintenance and service or (**b**) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by Broan-NuTone), faulty installation or installation contrary to recommended installation instructions.

The duration of any implied warranty is limited to the one-year period as specified for the express warranty. Some states and /or provinces do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

BROAN-NUTONE'S OBLIGATION TO REPAIR OR REPLACE, AT BROAN-NUTONE'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. BROAN-NUTONE SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. Some states and/or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state, or province to anoter. This warranty supersedes all prior warranties.

To qualify for warranty service, you must (a) notify the company at the address or telephone number below, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.

In case of discrepancies between the english version and the french and or spanish version of this warranty, the english version will prevail.

Broan at :: rangehoods .com is a division of kitchen :: accessories UNLIMITED